


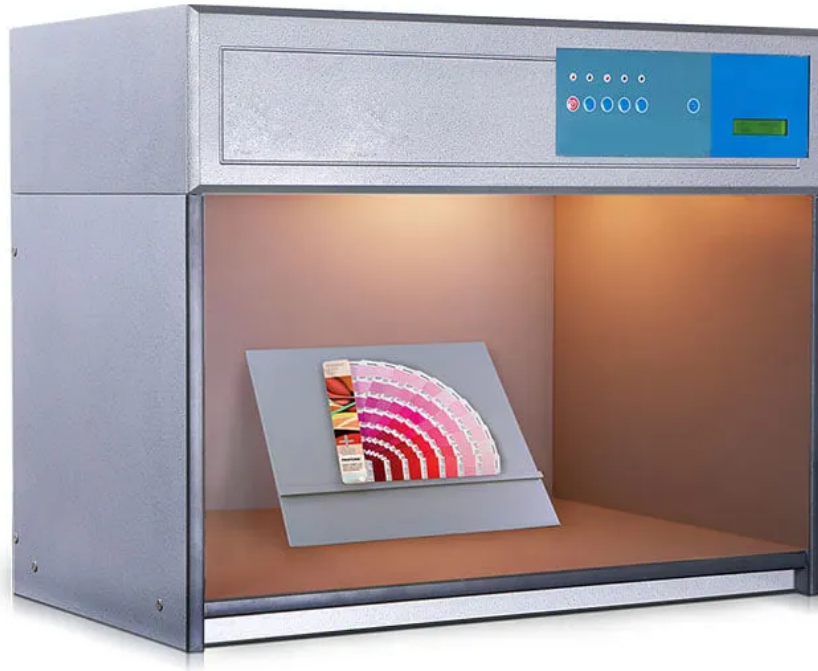

LIGHT BOOTH / COLOR MATCHING CABINET TT- T60(4)

- **Configuration** : D65, TL84, F, UV - four light sources
- **Weight** : 50.7 lbs
- **Dimensions (W x D x H):** 27.95 x 15.94 x 22.44 inches

Light Booth - Color Matching Cabinet TT-T60(4), featuring four light sources, ensures consistent lighting across all cabinets, providing ideal viewing conditions for reliable color-critical decisions.

This Light Booth - Color Matching Cabinet TT-[T60\(4\)](#) is beneficial for industries requiring color difference testing. It's a leading choice for designers and manufacturers of color matching box instrument products serving the Graphic Arts, Photography, Textiles, Dyeing, Packaging, Printing, Leather, Inks, Knitwear, Plastics, Automotive, and Ceramics industries.

APPLICATIONS

- **Textiles & Dyeing:** Assess fabrics, yarns, and finished garments for shade consistency under multiple standard light sources.
- **Printing & Packaging:** Verify print proofs, cartons, and labels to ensure accurate and uniform color reproduction.
- **Plastics & Automotive:** Inspect molded components, coatings, and finishes for reliable and consistent color matching.
- **Ceramics, Leather & Inks:** Evaluate surface treatments, finishes, and pigmented products using standardized lighting conditions.
- **Graphic Arts & Photography:** Ensure faithful color representation in images, artworks, and design samples for professional results.

FEATURES

- The Color Assessment Cabinet ensures more accurate color representation with 4 different light sources (D65, TL84, F, UV), capable of detecting metamerism.

- It meets or exceeds major international standards for visual color evaluation, including ASTM D1729, ISO3664, DIN, ANSI, and BSI.
- Easy operation with individual switches for each light source.
- Includes an elapsed time meter to track optimal lamp replacement.
- Automatically alternates among light sources.
- Provides quick and reliable color judgment with no warm-up time or flickering.
- Economical power consumption and low heat generation for highly efficient lighting.
- Customizable dimensions to suit specific needs.

TECHNICAL SPECIFICATIONS

Order No.	Name	Model	D65	TL84	F	UV	Voltage
10106	Standard light source booth	T60(4) four light source(220V)	2pcs	2pcs	4pcs	1pcs	220V/50Hz
10806	Standard light source booth	T60(4) four light source(115V)	2pcs	2pcs	4pcs	1pcs	115V/60Hz

Light Sources:			
Light Source	Color viewing booths application	Color temperature(k)	Power(W)
D65	International standard Artificial Daylight	6500	18
TL84	Applied to stores in Europe, Japan and China	4000	18
CWF	(Cool White Fluorescent) American Standard	4150	18
F/A	"Sun-setting Light Yellow" incandescent light source(imitation of sunset)	2700	40
UV	Viewing under ultraviolet light to detect and evaluate optical brighteners or fluorescent pigments	Wave length:365nm	20
U30	Warm White Fluorescent American Standard	3000	18



Torontech Inc.

251 Consumers Road, Suite 1200
Toronto, Ontario, M2J 4R3, Canada 

Phone: +1 416 368 2721 | Fax: +1 416 981 7652
Email: info@torontech.com

Torontech, LLC

601 Brickell Key Drive, Suite 700
Miami, FL 33131, USA 

Toll-Free: 1-866-383-7919
Email: sales@torontech.com

Torontech ME FZE

Meydan Grandstand, 6th Floor,
Meydan Road, Nad Al Sheba,
Dubai-261440, UAE 

Phone: +971 488 19252
Email: me@torontech.com

