



CRUSHER

Crusher for Plastic Recycling

Plastic crusher is designed and used for crushing various kinds of plastic materials into granules of different size. Crushed plastics can be recycled for reproduction of plastic products. This machine can help reduce the volume of plastic waste, greatly save costs and resources. Torontech offers a diverse range of Plastic Recycling Crusher models to cover a multitude of different capacities and applications.

APPLICATIONS

Wide Application of Plastic Crusher

- Plastic crusher can crush PVC, TPR, PP, PE, EVA, PET, PC, TPE materials, waste rubber products, sponge, etc.
- Plastic crusher can crush various kinds of plastics, such as plastic bottles, plastic profiles, plastic pipe, plastic plate, plastic sheet, plastic shells, plastic film, woven bags, etc.


How does Plastic Crusher Work?

The motor of the plastic crusher drives moving blade cutter to rotate at high speed. High speed rotating moving blades form a relative movement with fixed blades. Through the clearance between them, big materials will be crushed into small sizes. Crushed plastics that meet requirements will be discharged through the screen mesh. The size of this screen determines the final particle output size.

FEATURES

Features of Plastic Crusher

- Small space occupation, low power consumption.
- Easy to operate, easy to clean and maintain.
- Crusher blades adopting nitriding steel material, durable in use.
- Granular size is up to your requirements and can be adjusted by changing sieving screen.
- Cleaning drum can be equipped for each model upon requirement.
- Multiple models available to fit for different materials with different size.

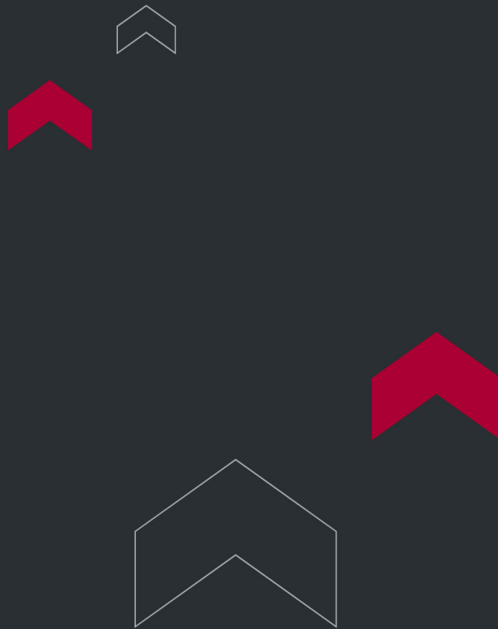

Torontech Inc.

251 Consumers Road, Suite 1200
Toronto, Ontario, M2J 4R3, Canada 

Phone: +1 416 368 2721 | Fax: +1 416 981 7652
Email: info@torontech.com

Torontech, LLC

601 Brickell Key Drive, Suite 700
Miami, FL 33131, USA 

Toll-Free: 1-866-383-7919
Email: sales@torontech.com

Torontech ME FZE

Meydan Grandstand, 6th Floor,
Meydan Road, Nad Al Sheba,
Dubai-261440, UAE 

Phone: +971 488 19252
Email: me@torontech.com

