



TORONTECH



HIGH PRESSURE WATER SPRAY TEST CHAMBER TORON- IPX9K™

High Pressure Water Spray Test chamber Toron-IPX9K™ is designed for IPX9K waterproof level testing. It is ideal for evaluating passenger cars, buses, tractors, motorcycles, and their components. This chamber assesses the physical and functional properties of products under high-pressure and steam jet cleaning conditions.

APPLICATIONS

High Pressure Water Spray Test chamber Toron-IPX9K™

Standard Test

The IPX9K rating is the highest standard for water ingress protection as defined by IEC 60529 and ISO 20653.

During testing, products are exposed to high-pressure water (8,000 to 10,000 kPa) at elevated temperatures of up to +80°C, with water jets delivering a flow rate of 14 to 16 liters per minute.

High Pressure Water Spray Test chamber Toron-IPX9K™

High Pressure Water Spray Test chamber Toron-IPX9K™

Structural Features

- 1. **Inner Chamber:** Made from 1.2mm thick SUS#304 stainless steel with a fully welded structure for excellent sealing and crack resistance.
- 2. **Exterior:** Crafted from 1.5mm thick cold-rolled steel, treated with brushing, polishing, and painting for enhanced durability and scratch resistance.
- 3. **Insulation:** Features 100mm thick polyurethane foam for superior thermal insulation.
- 4. **Door Seal:** Equipped with double silicone rubber seals for optimal airtightness.
- 5. **Observation Window:** Consists of four layers of tempered glass, with customizable size options.
- 6. **Anti-Frost Feature:** Built-in heating wires prevent frosting on the observation window during low-temperature operations.

Electrical System


The circuit cabinet features a clean, organized layout with a professional appearance. All circuits comply with UK standards and come with detailed circuit diagrams. Each line is uniquely coded for clear identification, making troubleshooting straightforward and efficient.

High Pressure Water Spray Test chamber Toron-IPX9K™

TECHNICAL SPECIFICATIONS

Testing room size (W*H*D mm)	1000*1080*1050
External size (W*H*D mm)	1500*1950*1250
Test bench area	400mm
Water surface temperature	80±5.0°C

Flow	14~16L/min
Pressure	8000~10000kpa
Angle	The nozzles are distributed at 0°, 30°, 60°, 90°counter clockwise
Rotating speed	1~20r/min can also be used for speed regulation without joints
Water pressure control	Electromagnetic flowmeter
Voltage	AC380V TN-S

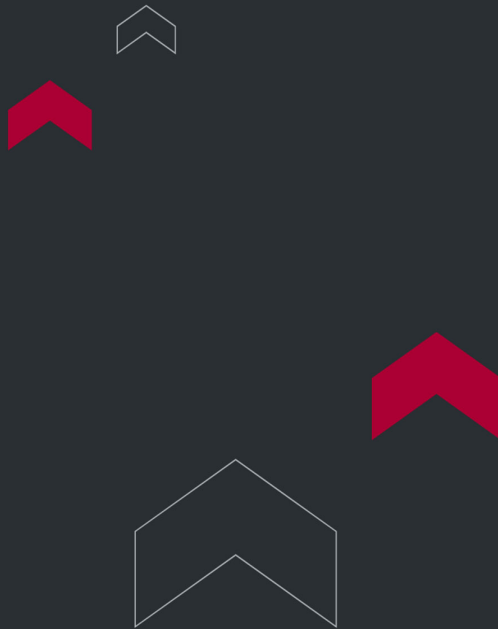

Torontech Inc.

251 Consumers Road, Suite 1200
Toronto, Ontario, M2J 4R3, Canada 

Phone: +1 416 368 2721 | Fax: +1 416 981 7652
Email: info@torontech.com

Torontech, LLC

601 Brickell Key Drive, Suite 700
Miami, FL 33131, USA 

Toll-Free: 1-866-383-7919
Email: sales@torontech.com

Torontech ME FZE

Meydan Grandstand, 6th Floor,
Meydan Road, Nad Al Sheba,
Dubai-261440, UAE 

Phone: +971 488 19252
Email: me@torontech.com

