


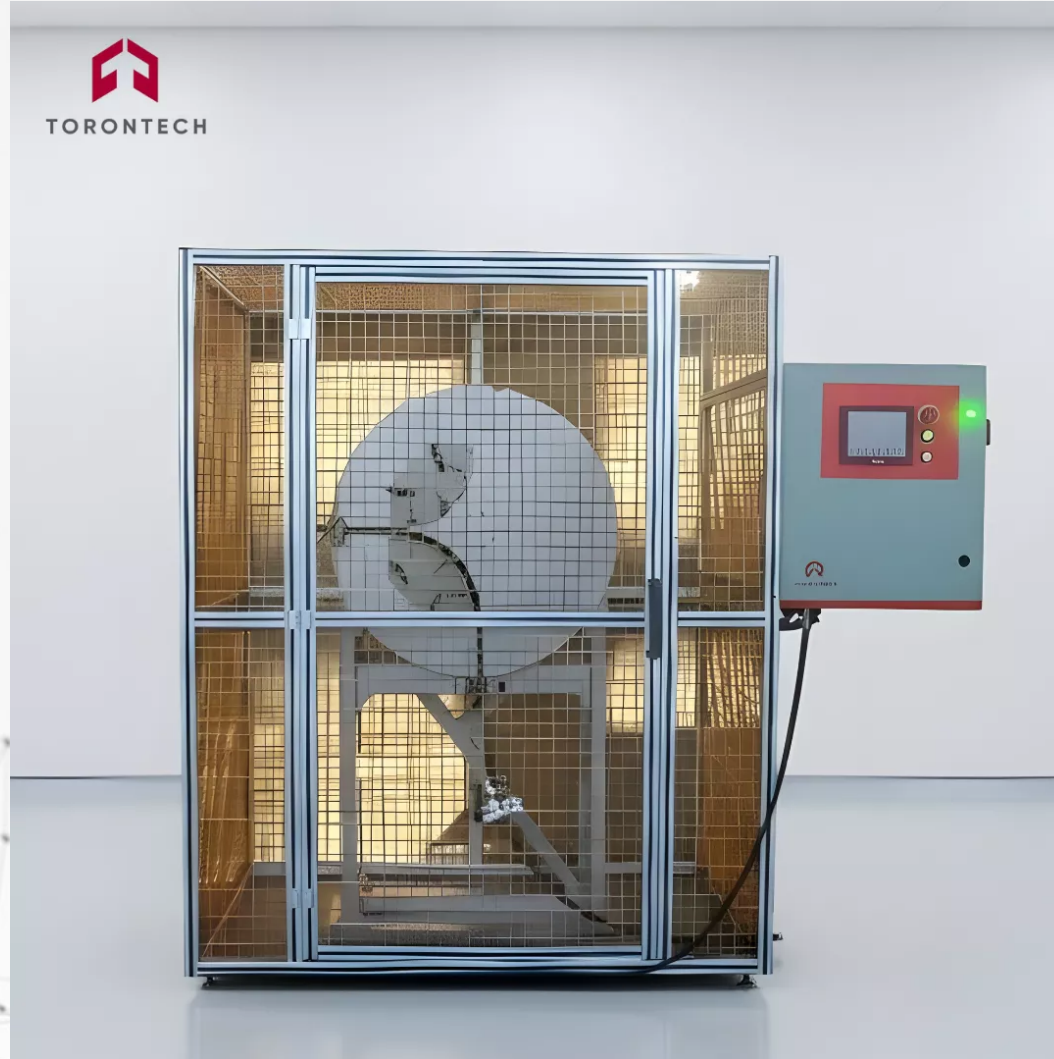

OPTICAL FIBER CABLE REPEATED BENDING TESTER

Optical Fiber Cable Repeated Bending Tester is used to determine the ability of a fiber optic cable to withstand repeated bending (cyclic flexing).

Optical Fiber Cable Impact Testing Machine TTOFCRB Series allows a cable sample to be bent backwards and forwards at an angle of 180° by bending extreme ends of cables at 90° in opposite directions, while the sample is subjected to a tensile load.

The bending arm is designed to hold the cable securely during the entire test, without crushing the optical fibers or inducing optical loss. The bending radius is controlled by replaceable cushioning reels, chosen to match the cable bending radius. The machine is capable of cycling at a rate of 30 cycles per minute.

APPLICATIONS

- **Telecommunication Cables** – Assesses resistance to cyclic bending during installation and use.
- **Elevator and Lift Cables** – Ensures flexibility and durability under continuous motion.
- **Industrial and Robotic Systems** – Validates performance of cables subjected to repetitive flexing.
- **Automotive and Transport Wiring** – Tests bending endurance in confined and dynamic environments.
- **Aerospace and Defense Cables** – Confirms long-term reliability under repeated bending stress.
- **Laboratories and Quality Control** – Provides IEC 60794-1-2-E6 compliance testing for product certification.

TECHNICAL SPECIFICATIONS

Model	TTOFCRB
Bending angle	±90°
Maximum bending cycles	1-9999 cycles

Frequency range	10 - 30 cycles / min
Bending radius	75/200/300mm (others upon request)
Mass of weights for applying tension	1-10 kg (other upon request)
Power supply	Please specify voltage and frequency before placing the order. Power must be free of spikes and surges exceeding 10% of the nominal voltage)
Dimension (L x W x H)	2050 x 1000 x 1800 mm
Weight	800kg



Torontech Inc.

251 Consumers Road, Suite 1200
Toronto, Ontario, M2J 4R3, Canada 

Phone: +1 416 368 2721 | Fax: +1 416 981 7652
Email: info@torontech.com

Torontech, LLC

601 Brickell Key Drive, Suite 700
Miami, FL 33131, USA 

Toll-Free: 1-866-383-7919
Email: sales@torontech.com

Torontech ME FZE

Meydan Grandstand, 6th Floor,
Meydan Road, Nad Al Sheba,
Dubai-261440, UAE 

Phone: +971 488 19252
Email: me@torontech.com

